

6. Maintenance

This chapter describes different maintaining processes for plants with Delta inverters, such as firmware update, inverter replacement, etc.

6.1. Firmware update


This section shows how to update the firmware for DC1 and WiFi inverter. Please refer to 6.1.1 and 6.1.2 for more details.

6.1.1. DC1 Firmware Update


[DC1 Firmware Update - Delta Server update method]

LOCAL SETTING -> Maintenance -> DC1 Firmware Update


Select Download Access.

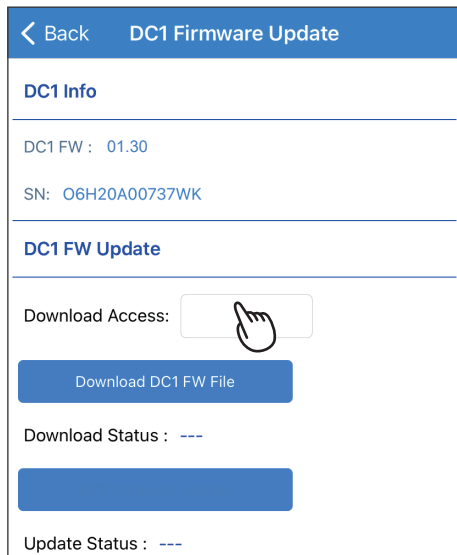


Click "Delta server".

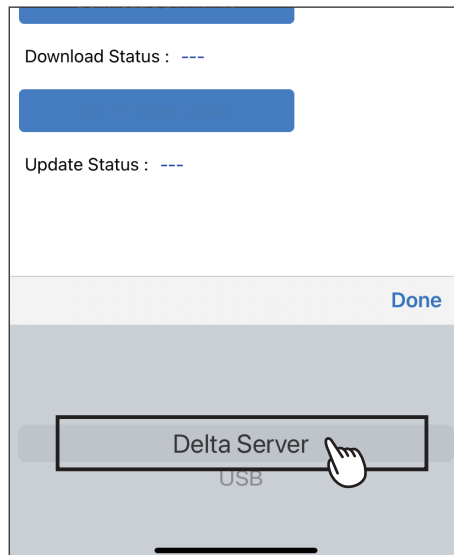


Click "DOWNLOAD DC1 FW FILE".

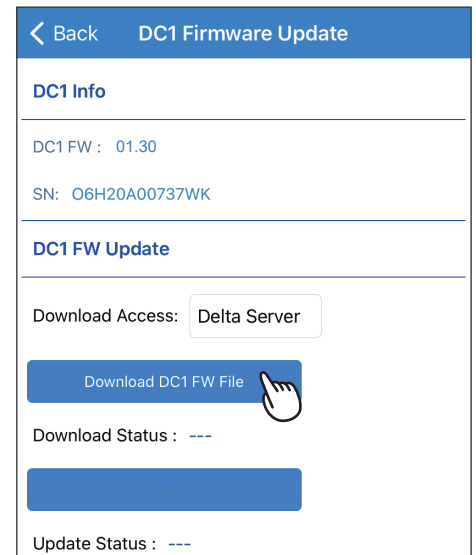


Click "OK".

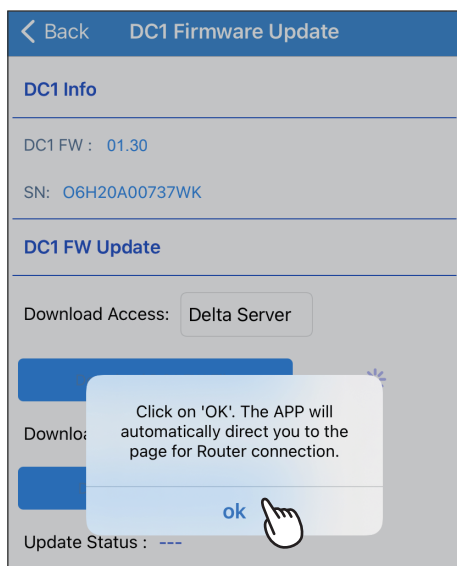

Select a method to get Internet ability.

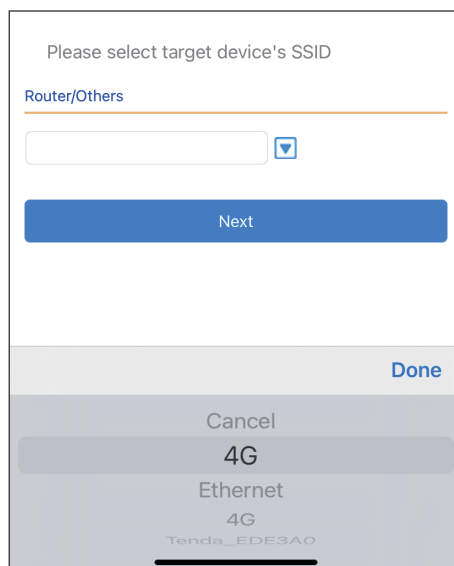


Downloading...

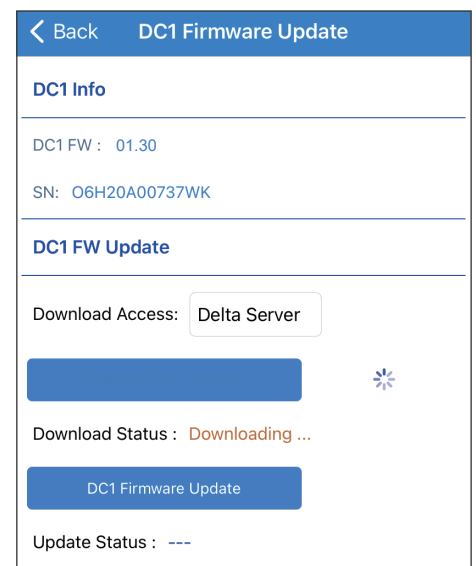


[DC1 Firmware Update - USB update method]

LOCAL SETTING -> Maintenance -> DC1 Firmware Update


Select Download Access.

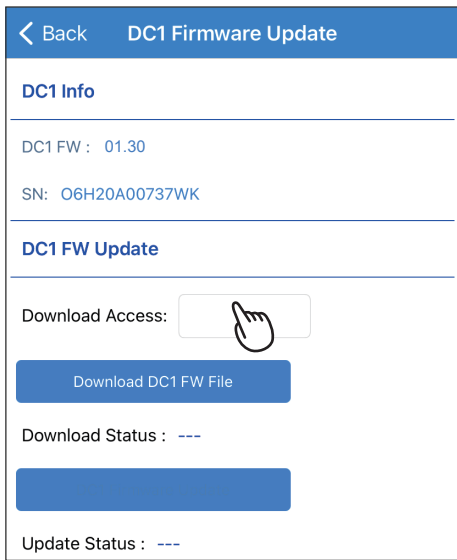


Click "USB".

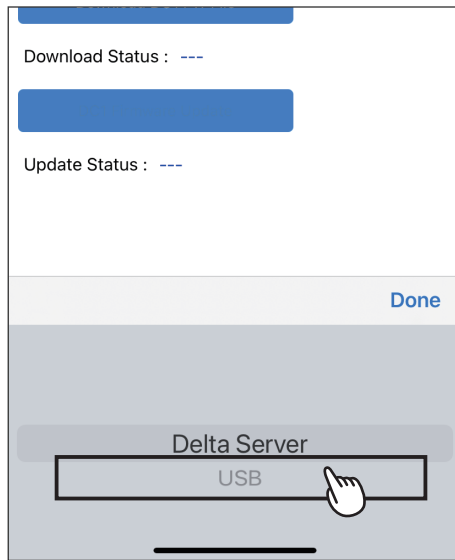


Click "DOWNLOAD DC1 FW FILE".

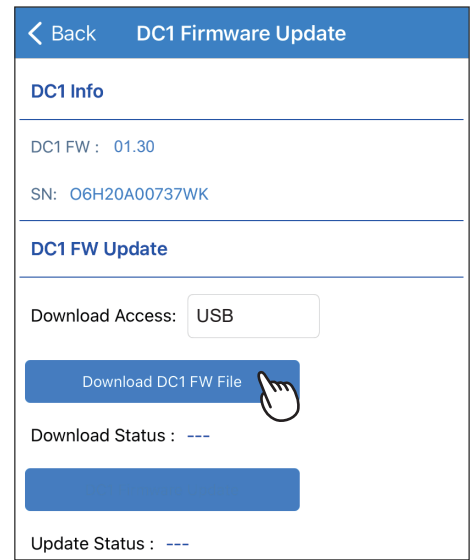

After the FW download,
please click "DC1 FIRMWARE UPDATE"
to start the updating process.

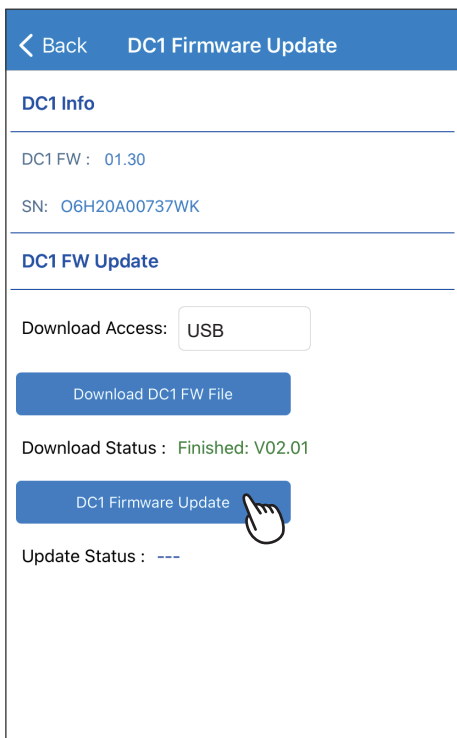

DC1 is updating...

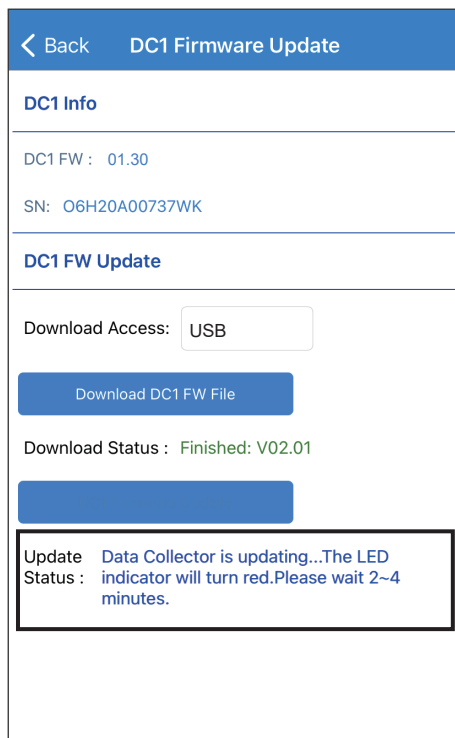

Successfully updated DC1.

