


# [Inverter FW Update - connection of inverter]

LOCAL SETTING -> Maintenance -> Firmware Update


Enter Firmware update page.




Click "OK" the app will ask users to connect to Internet.

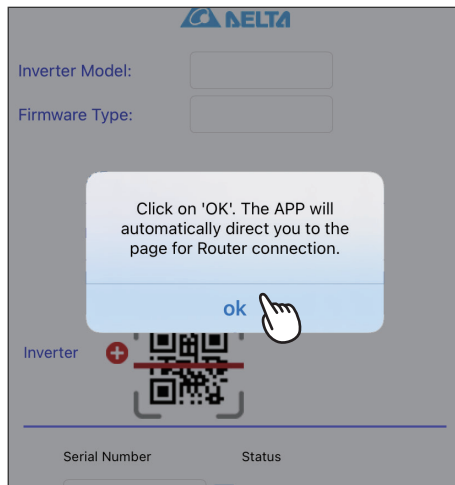


Select a method to get Internet ability.

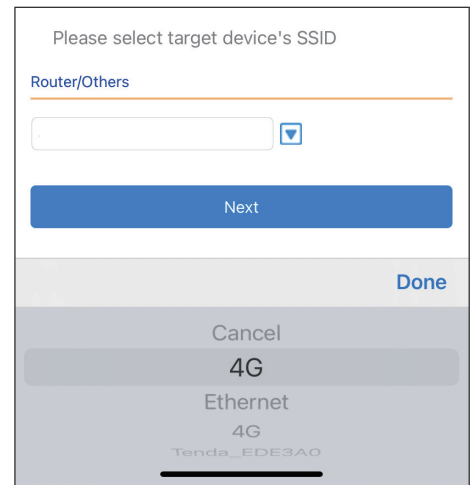

Click "Inverter Model".

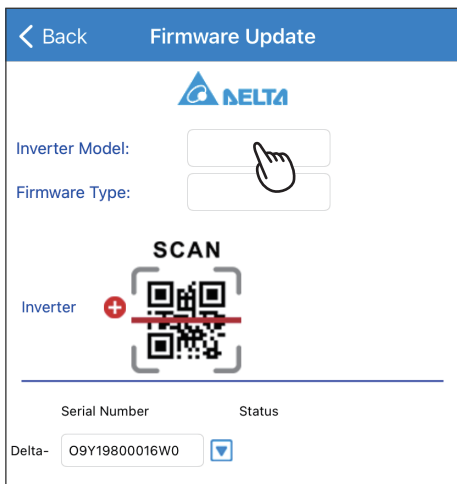


Select a Inverter model for FW update.

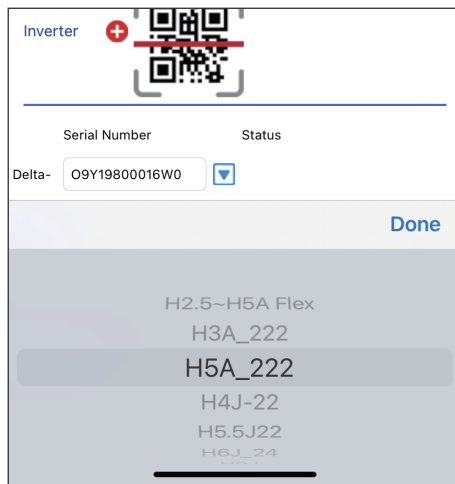

Select FW type, please confirm with local service for the FW type.




Click "Load Hex File".

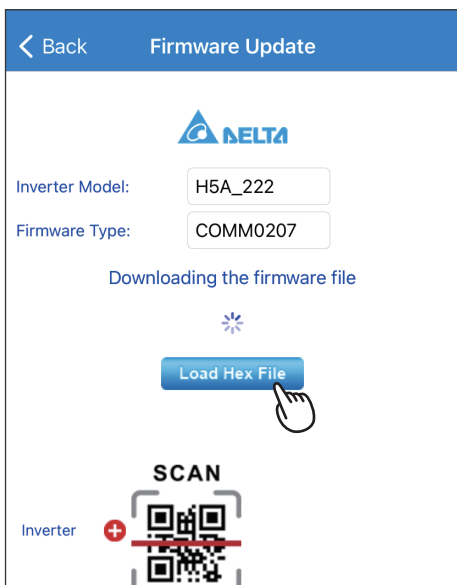

Select the Inverter serial number for FW update.



Click "Update Inverter".

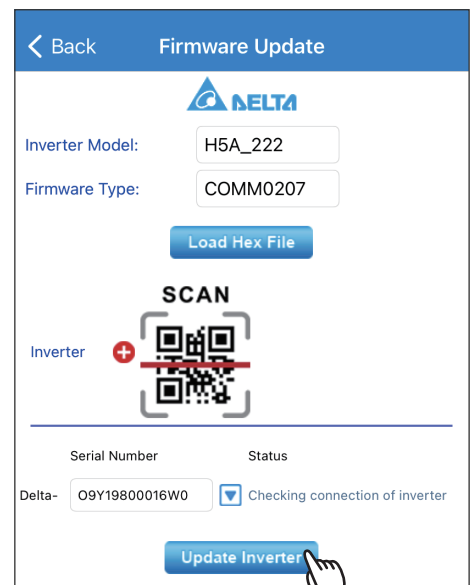

Upgrading...

Click "OK".

Back Firmware Update



Inverter Model: H5A\_222  
Firmware Type: COMM0207

Load Hex File

Inverter SCAN

Serial Number Status  
Delta- O9Y19800016W0 Upgrading

Initial InterProcess Rate:43%

Firmware Version : 02.07

Information:  
TCPGetPIDCmd done  
ReqBoot1Tcp done  
ReqBoot2Tcp done  
ProcessorSelectTCP done

Back Firmware Update

Inverter Model: H5A\_222  
Firmware Type: COMM0207

Load Hex File

Inverter SCAN

Serial Number Status  
Delta- O9Y19800016W0 Success

Update Inverter

Firmware Version : 02.07

Information:  
BurnProcessTCP done  
BankCloseProcTCP done  
BurnDoneProcTCP done  
InternalProcTCP\_final done  
Total Tx Len :227968